

ตั้งค่า Forward Port

- 1. เปิด Browser (Chrome, Firefox, IE) พิมพ์ **192.168.1.1** ในช่อง Address และกด Enter
- 2. กรอก Username และ Password โดยดูจากข้อมูลด้านล่างของเราเตอร์ จากนั้นคลิก Sign In

(←) → C' û	192.168.1.1	90% 🗸 🗘	
		AIS	
	F 10	nre	
	SIGN	I IN	
	USERNAME		
	*		
	PASSWORD		
	SIGN	IN	

3. ที่หน้าการตั้งค่า คลิก Advance Setup

		Mode Switching admin Logout
Home Status	Basic Setup Advance Setup Application	Management
Device Infomation	Internet Status	asy Diagnostic
Model Name: HG8245W5 Mac-Address: Hardware Version:	IP Address:	VAN IP Check VAN IP Check :
Firmware Version: CPU Usage:	Re-Connect	DNS1 Check : DNS2 Check :
Memory Usage:	Vireless P 24 GHz 24G C11629	Ying Check
Reboot Attached Devices	S GHz L S GHz L Initiation of the state of the st	ANT IP Check:
		ANZ IP Check :
Link to DHCP client Number of devices: 1	HiLink L Device Model MAC Address IP Address	AN3 IP Check :



Fibre				Mode Switcl	hing admin	Logout
Home	Status Basic Setup	Advance Setup	Application	Management		
1 Forward Rules	IPv4 Port Mapping					
DMZ Function 2 IPv4 Port Mapping	On this page, you can set port mapp accessed from the Internet. Note: The well-known ports for voic	ing parameters to set up vi e services cannot be in the	irtual servers on the LA e range of the mapping	N network and allow these ports.	servers to be	
Port Trigger Confi	3 New Delete					
	Mapping Name	WAN Name	Internal Host	External Host	Enable	

4. เลือกเมนูด้านซ้าย Forward Rules -> IPv4 Port Mapping -> New

- 5. คลิกเลือก **User-defined**
- 6. AAn Enable Port Mapping
- 7. ตั้งชื่อในช่อง Mapping Name:
- 8. เลือก WAN Name: 1_TR069_INTERNET
- 9. เลือก Internal Host: IP เครื่องคอมพิวเตอร์
- 10. จากนั้นคลิก **Add**

					Mode Swit	ching admin Log
	Home	Status Basic	Setup Advance Setup	Application	Management	t
Forward Rules	^	IPv4 Port Ma	pping			
DMZ Function	ion	On this page, you can	set port mapping parameters to set up	virtual servers on the LAN	I network and allow thes	se servers to be
IPv4 Port Ma	lapping	accessed from the Inte Note: The well-known	ernet. ports for voice services cannot be in the	he range of the mapping p	orts.	
Port Trigger	r Confi	New Delete	e			
		Mappir	ng Name WAN Name	Internal Host	External Host	Enable
		Type: Application: Enable Port Mapp Mapping Name: WAN Name: Internal Host: External Source IP Address:	User-defined OAp Select Test Test *	v	กรอ	งทข้อมูลให้ครบ
		Type: Application: Enable Port Mapp Mapping Name: WAN Name: Internal Host: External Source IP Address: Add Ran	User-defined OAp Select	plication	nse	งกงัอมูลให้ครบ



- 11. คลิกเลือก **Protocol:**
- 12. तिं Internal port number : LAN port
- 13. ใส่ External port number : WAN port
- 14. จากนั้นกด **Apply**

Туре:	O User-defined ○ App	plication	
Application:	Select ∨		
Enable Port Mapping:			
Mapping Name:	Test		
WAN Name:			
Internal Host:	*	~	
External Source IP Address:			
กรอกข้อมูลให้คร	งบด้วน		
Protocol:	TCP/UDP ~	Internal port number:	80 80 *
External port number:	12000 12010	External source port number:	
Delete			
Add			
		пด Apply 🛛 Ap	ply Cance